

# Go Beyond Basic

Unlock powerful versatility with the J850™ Pro 3D printer from Stratasys

Engineering applications demand a system with the flexibility to help you verify form, perform functional tests and validate design choices. The J850 Pro provides the functional, multi-material capabilities you need.





Earbud case prototypes 3D printed with DraftGrey™ (left) and VeroPureWhite™ (right)

## Iterate **With Ease**

In the time it takes to make a single prototype using traditional methods, you can get 5x more iterations with the J850 Pro.

The large, seven-material capacity allows you to load your most-used resins and avoid downtime associated with material changeovers. Plus, you can print each model quickly with the Super High Speed draft mode.

This accelerated workflow enables you to design, test and refine in a matter of days, not weeks.





3D printed shoe midsole and outsole prototypes created by Brooks Running

## Prototype Smarter

With the J850 Pro, it's simple to create functional, multi-material models that let you test and validate prototypes faster, and move through stakeholder review with ease. This leads to quicker decisions and approvals, helping you achieve product verification, increase throughput and save valuable time.



Motorcycle throttle grip prototypes 3D printed with Agilus30™ material

# Function Like a Pro

Create prototypes that look and feel like the finished product. The J850 Pro can print up to seven materials simultaneously, allowing for virtually unlimited material combinations and multi-material parts.

From consumer products to medical devices, the J850 Pro helps you simplify and speed up product development. High print resolution ensures smooth surfaces for parts and incredible accuracy, even for details like printed graphics and complex geometries. Flexible materials in a range of shore values allow for precise simulation of rubber and silicone products, and heat-resistant Digital ABS Plus means you can perform functional testing at any stage of the design process. Plus, digital material mixes let you simulate the properties of engineering materials like polypropylene, which means even more accurate prototypes.

## The Versatility You Need. The Accuracy You Expect.

When it comes to functional capabilities, only PolyJet™ Technology allows you to create hundreds of digital material mixes with just a few cartridges.

Created to help engineers speed through rapid prototyping, the J850 Pro is the perfect fit for any stage of product development. Whether you need low-cost and fast models for concept validation, more durable prototypes for functional testing or highly accurate, multi-material models, the J850 Pro offers the flexibility to help boost speed and productivity.

And if you need full color capabilities down the line, the J850 Pro can easily be upgraded into J850™ Prime.



Multi-material container lid prototype 3D printed with Agilus30 material

# Lower the Cost to Create



In general, prototyping with 3D printing is more cost effective than traditional methods and eliminates the need to outsource or hire specialized experts. Lower prototyping costs by more than 80% compared to traditional methods. And because the J850 Pro is priced lower than the full color J850 Prime, you're only paying for the features you really need and not for unused capabilities.

## Prep Files for a Successful Print

Streamline your workflow with GrabCAD Print™ software. GrabCAD Print lets you print directly from your most used design software, and accepts popular file formats such as 3MF, OBJ/VRML, STEP and various native CAD formats. You can also get detailed previews of your model so you can make adjustments before going to print. And regularly updated smart default settings such as texture recognition, tooltips and notifications will help guide you through a seamless printing process.

## GrabCAD Printer Connectivity

Connect your PolyJet Printers into the software systems you use to manage your production process. GrabCAD Printer Connectivity integrates Stratasys PolyJet printers with enterprise applications such as ERP, BI, and Digital Rights Management. It also enables communication with MES systems to enable automation and production data collection, in addition to analytics.

Learn more about GrabCAD Print at [grabcad.com/print](https://grabcad.com/print)

# 80%

80% Lower Cost  
to Prototype\*

\* Versus traditional methods of prototyping.

# 5x

Make design  
iterations 5x faster\*

# Confirm Form and Fit, **Fast**

With speed, accuracy and repeatability, the J850 Pro is the most versatile rapid prototyping solution for design engineering applications today. Visualize and verify designs with a flexible in-house system, and meet business demands immediately and with ease.



Threaded gauge prototype with male and female components

# Make It **Perform**

Achieve unprecedented combinations of functional digital materials – from opaque to transparent and rigid to flexible – in a single print by leveraging multimaterial capabilities and the virtually endless possibilities of PolyJet™ materials.



## Concept in Grayscale

Produce low-cost concept models that rapidly advance the first stages of the design process with DraftGrey™.



## Achieve Transparency

Use VeroUltra™Clear to 3D print translucent parts that simulate glass or clear acrylic, and create accurate prototypes for lighting components and fluid analysis.



## Test Functionality

Digital ABS Plus material provides the heat resistance and durability you need to verify fit and functionality.



## Create Flexible Parts


Use the Agilus30™ material family to create flexible parts and prototypes that can flex, bend, elongate and seal.

# See the Specs

## J850 Pro Product Specifications

|                                  |   |
|----------------------------------|---|
| <b>Model Materials</b>           | <ul style="list-style-type: none"><li>• VeroUltra™ opaque materials in black and white</li><li>• Vero family of opaque materials in neutral shades (black, white and gray)</li><li>• Agilus30 flexible material</li><li>• Transparent VeroClear and VeroUltraClear</li><li>• Digital materials</li><li>• Digital ABS Plus Ivory</li></ul> |
| <b>Digital Model Materials</b>   | Composite materials including: <ul style="list-style-type: none"><li>• Rubber-like materials in a variety of Shore A values</li><li>• Translucent greyscale tints</li></ul>   |
| <b>Support Materials</b>         | SUP705™ (water jet removable)<br>SUP706B™ (soluble)   |
| <b>Build Size</b>                | 490 x 390 x 200 mm (19.3 x 15.35 x 7.9 in.)   |
| <b>Layer Thickness</b>           | Horizontal build layers down to 14 microns (0.00055 in.)<br>55 microns (0.002 in.) in Super High Speed1 mode  |
| <b>Workstation Compatibility</b> | Windows 10  |
| <b>Network Connectivity</b>      | LAN – TCP/IP  |
| <b>System Size and Weight</b>    | System: 1400 x 1260 x 1100 mm (55.1 x 49.6 x 43.4 in.); 430 kg (948 lbs.)<br>Material Cabinet: 1119 x 656 x 637 mm (44 x 25.8 x 25.1 in.); 153 kg (337 lbs.)  |
| <b>Operating Conditions</b>      | Temperature 18 – 25 °C (64 – 77 °F); relative humidity 30-70% (non-condensing)  |
| <b>Power Requirements</b>        | 100–120 VAC, 50–60 Hz, 13.5 A, 1 phase<br>220–240 VAC, 50–60 Hz, 7 A, 1 phase   |
| <b>Regulatory Compliance</b>     | CE, FCC, EAC, RCM, R-NZ   |
| <b>Software</b>                  | GrabCAD Print, SDK (API)  |
| <b>Build Modes</b>               | High Quality: up to 7 base resins, 14-micron (0.00055 in.) resolution<br>High Mix: up to 7 base resins, 27-micron (0.001 in.) resolution<br>High Speed: up to 3 base resins, 27-micron (0.001 in.) resolution<br>Super High Speed: 1 base resin, 55-micron (0.002 in.) resolution   |
| <b>Accuracy</b>                  | Typical deviation from STL dimensions, for models printed with rigid materials, based on size: under 100 mm – ±100µ; above 100 mm – ±200µ or ± 0.06% of part length, whichever is greater.  |

Print it.  
Perfect it.  
Contact Us Today.

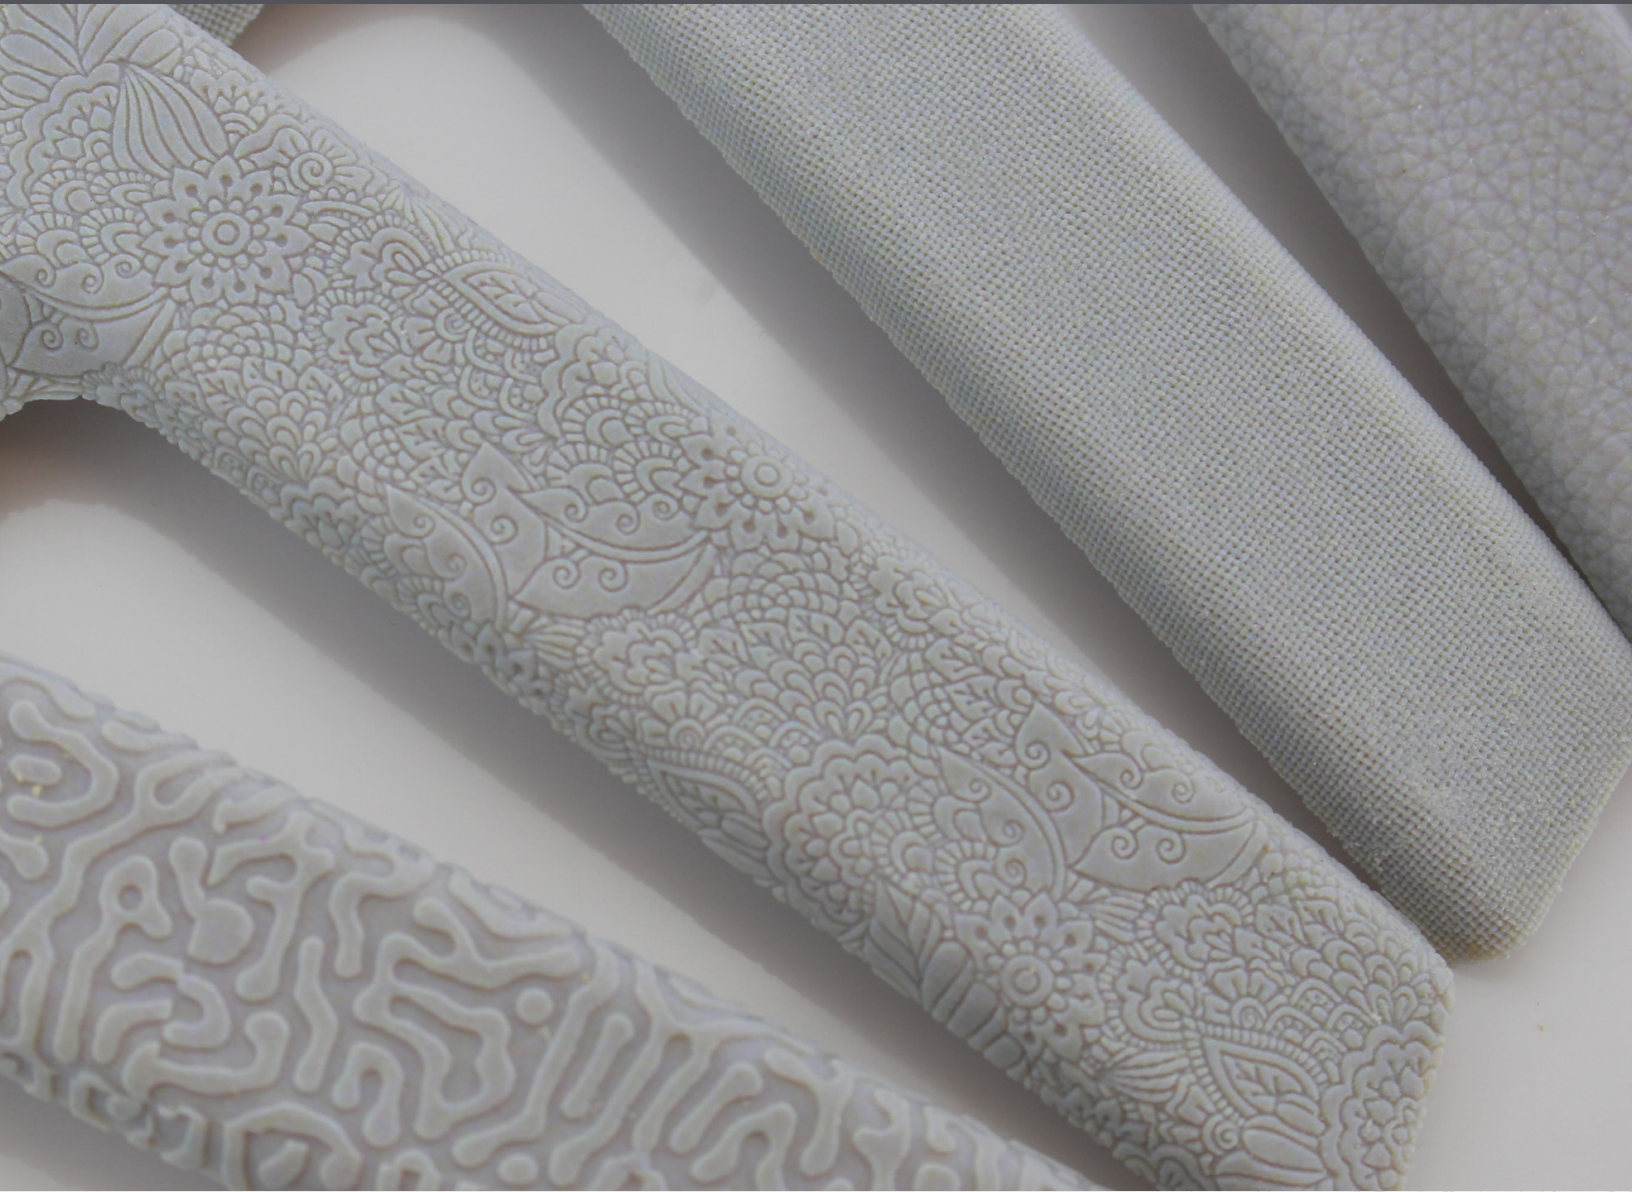

#### Stratasys Headquarters

7665 Commerce Way,  
Eden Prairie, MN 55344  
+1 800 801 6491 (US Toll Free)  
+1 952 937-3000 (Intl)  
+1 952 937-0070 (Fax)

1 Holtzman St., Science Park,  
PO Box 2496  
Rehovot 76124, Israel  
+972 74 745 4000  
+972 74 745 5000 (Fax)

[stratasys.com](http://stratasys.com)

ISO 9001:2015 Certified

© 2022 Stratasys Ltd. All rights reserved. Stratasys, Stratasys signet, PolyJet, J850, Digital ABS Plus, Agilus30, Vero, VeroPureWhite, VeroBlackPlus, VeroClear, VeroUltraClear, SUP705, SUP706B and GrabCAD Print are trademarks or registered trademarks of Stratasys Ltd. and/or its subsidiaries or affiliates and may be registered in certain jurisdictions. All other trademarks belong to their respective owners. Product specifications subject to change without notice. BR\_PJ\_J850\_Pro\_0522a

