




MATERIAL DATA SHEET
FDM

ULTEM™ 1010 Resin

FDM Thermoplastic Filament

The information presented are typical values intended for reference and comparison purposes only. They should not be used for design specifications or quality control purposes.

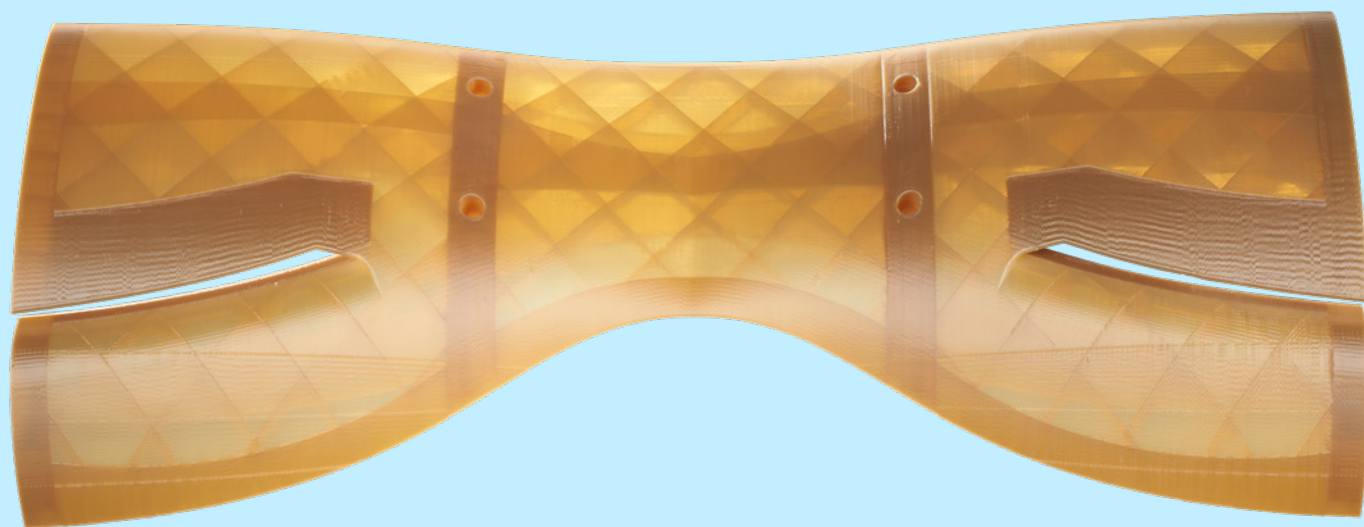



Overview

ULTEM™ 1010 resin is a high-performance FDM® polyetherimide (PEI) thermoplastic. It exhibits high tensile strength in addition to broad chemical resistance and excellent thermal stability. Its high heat resistance makes it autoclave-capable for applications involving sterilization and composite lay-up tooling.

This material is available in both general-purpose and certified grades (CG). ULTEM™ 1010 resin is used with breakaway support material and is available in natural color.

Contents:

Ordering Information	3
Physical Properties	4
Mechanical Properties.....	5
Outgassing	7
Fire Protection for Devices and Appliances UL 94.....	7
Appendix.....	8





Ordering Information

Table 1 – Printer and Support Material Compatibility

Printer	Model Tip	Layer Height	Support Material	Support Tip
Fortus 450mc™	T14	0.254 mm (0.010 in)	SUP9000B	T16
	T20	0.3302 mm (0.013 in)		
F900®	T14	0.254 mm (0.010 in)	SUP9000B	T16
	T20	0.3302 mm (0.013 in)		
	T40A	0.508 mm (0.020 in)		T20

Build Sheet

Fortus High Temperature Build Sheets

- 0.51 x 660 x 965 mm (0.02 x 26 x 38 in.)
- 0.51 x 406 x 470 mm (0.02 x 16 x 18.5 in.)

System Requirements¹

Fortus 450mc

- Standard Fortus 450mc head
- ULTEM™ 1010 resin material license (included with All Material License)

F900

- Standard F900 head
- ULTEM™ 1010 resin material license

Table 2 – ULTEM™ 1010 Resin Ordering Information

Part Number	Description	System Compatibility
Filament Canisters		
Fortus Plus Canister (black snout)		
355-02330	ULTEM™ 1010 resin, 92.3 cu in - Plus	Fortus 450mc, F900, Fortus 900mc (S/N L502 and up)
355-02320	ULTEM™ 1010 resin CG, 92.3 cu in - Plus	
355-03240	SUP9000B Support, 92.3 cu in. - Plus	
Fortus Classic Canister (gray snout)		
312-22000	ULTEM™ 1010 resin, 92.3 cu in - Classic	Fortus 900mc (S/N prior to L502)
355-03240	ULTEM™ 1010 resin CG, 92.3 cu in - Classic	
310-31000	SUP9000B Support, 92.3 cu in. - Classic	
Printer Consumables		
Fortus		
511-12000	T14 tip	Fortus 450mc, F900, Fortus 900mc
511-10701	T16 tip	
511-10750	T20 tip	
511-10401	T40A tip	F900, Fortus 900mc
325-00275-S	High Temperature build sheet, 0.02x16x18.5 in. (0.51 x 406 x 470 mm), 20 pack	Fortus 450mc, F900, Fortus 900mc
325-00475-S	High Temperature build sheet, 0.02 x 26 x 38 in. (0.51 x 660 x 965 mm), 10 pack	F900, Fortus 900mc
Print Heads		
Fortus		
821725-XXXX	Standard Fortus 450mc head (silver handle)	Fortus 450mc
380-30300-S	OpenAM Standard Fortus 450mc head (silver handle, additional sticker)	
404210-XXXX	Standard F900 head (formed rod handle)	F900
380-63600-S	OpenAM Standard F900 head (formed rod handle, additional sticker)	

¹ Contact your Stratasys representative for ordering information.



Physical Properties

Values are measured as printed. XY, XZ, and ZX orientations were tested. For full details refer to the [Stratasys Materials Test Report](#). DSC and TMA curves can be found in the Appendix.

Table 3 – ULTEM™ 1010 Resin Physical Properties

Property	Test Method	Typical Values	
		XY	XZ/ZX
HDT @ 66 psi	ASTM D648 Method B	214.1 °C (417.3 °F)	
HDT @ 264 psi	ASTM D648 Method B	212.2 °C (413.9 °F)	
Tg	ASTM D7426 Inflection Point	209.37 °C (408.87 °F)	
Mean CTE	ASTM E831 (-50 °C to 60 °C)	36.08 µm/[m*°C] (20.04 µin/[in*°F])	-
	ASTM E831 (60 °C to 205 °C)	29.81 µm/[m*°C] (16.56 µin/[in*°F])	-
	ASTM E831 (-50 °C to 110 °C)	-	32.50 µm/[m*°C] (18.06 µin/[in*°F])
	ASTM E831 (110 °C to 165 °C)	-	16.19 µm/[m*°C] (8.995 µin/[in*°F])
	ASTM E831 (165 °C to 200 °C)	-	4.291 µm/[m*°C] (2.384 µin/[in*°F])
Volume Resistivity	ASTM D257	>7.00*10 ¹⁴ Ω*cm	
Dielectric Constant	ASTM D150 1 kHz test condition	2.841	2.888
	ASTM D150 2 MHz test condition	3.089	3.156
Dissipation Factor	ASTM D150 1 kHz test condition	-0.002	-0.002
	ASTM D150 2 MHz test condition	0.000	0.000
Thermal Conductivity	ASTM E1952 @0C	0.2430 W/m*K 0.1404 BTU/(hr*ft°F)	
Thermal Conductivity	ASTM E1952 @30C	0.2420 W/m*K 0.1399 BTU/(hr*ft°F)	
Thermal Conductivity	ASTM E1952 @60C	0.2426 W/m*K 0.1399 BTU/(hr*ft°F)	
Thermal Conductivity	ASTM E1952 @90C	0.2417 W/m*K 0.1402 BTU/(hr*ft°F)	
Thermal Diffusivity	ASTM E1952 @0C	0.158 mm²/s 2.45*10 ⁻⁴ in²/s	
Thermal Diffusivity	ASTM E1952 @30C	0.141 mm²/s 2.19*10 ⁻⁴ in²/s	
Thermal Diffusivity	ASTM E1952 @60C	0.130 mm²/s 2.02*10 ⁻⁴ in²/s	
Thermal Diffusivity	ASTM E1952 @90C	0.121 mm²/s 1.88*10 ⁻⁴ in²/s	
Specific Gravity	ASTM D257 @23 °C	1.29	




Mechanical Properties

ULTEM™ 1010 resin samples were printed with a 0.254 mm (0.010 in.) layer height on the F900. For the full test procedure please see the [Stratasys Materials Test Procedure](#).


Print Orientation

Parts created using FDM are anisotropic as a result of the printing process. Below is a reference of the different orientations used to characterize the material.

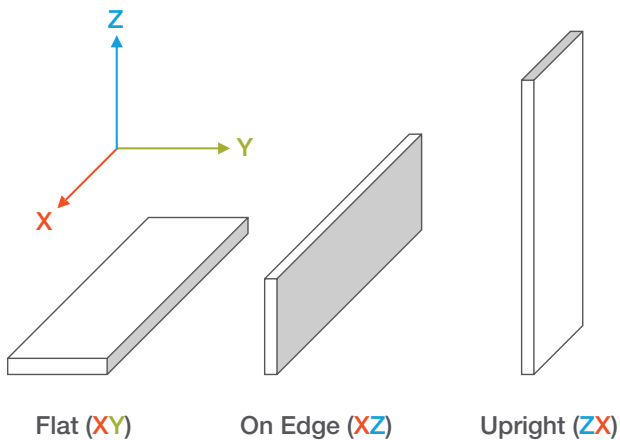

Tensile Curves

Due to the anisotropic nature of FDM, tensile curves look different depending on orientation. Below is a guide of the two types of curves seen when printing tensile samples and what reported values mean.

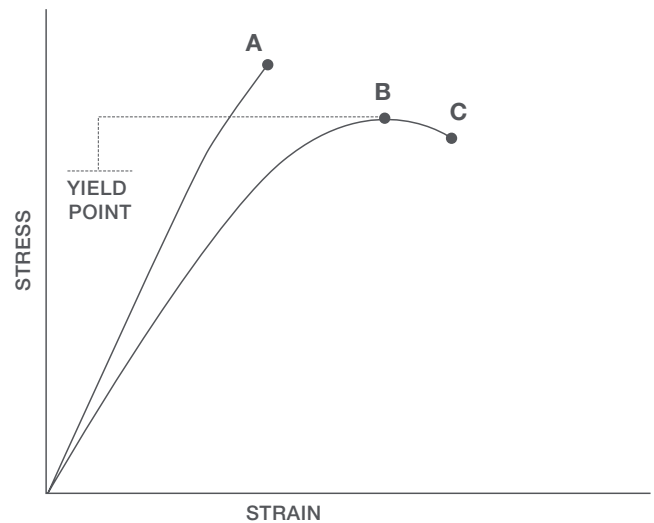

A = Tensile at break, elongation at break (no yield point)

B = Tensile at yield, elongation at yield

C = Tensile at break, elongation at break


Table 4 – ULTEM™ 1010 Resin Mechanical Properties (F900 - T14 Tip)

		XZ Orientation ¹	ZX Orientation ¹
Tensile Properties: ASTM D638			
Yield Strength	MPa	No yield	No yield
	psi		
Elongation @ Yield	%	No yield	No yield
Strength @ Break	MPa	79.2 (4.9)	28.2 (8.8)
	psi	11,500 (710)	4,080 (1,300)
Elongation @ Break	%	4.0 (0.42)	1.1 (0.45)
Modulus (Elastic)	GPa	3.04 (0.18)	3.00 (0.45)
	ksi	441 (27)	435 (65)
Flexural Properties: ASTM D790, Procedure A			
Strength @ Break	MPa	No break	81.6 (13)
	psi	No break	11,800 (1,900)
Strength @ 5% Strain	MPa	128 (1.8)	-
	psi	18,600 (270)	-
Strain @ Break	%	No break	3.19 (0.53)
Modulus	MPa	2.91 (0.049)	2.64 (0.13)
	ksi	422 (7.0)	383 (19)
Compression Properties: ASTM D695			
Yield Strength	MPa	245 (50)	438 (31)
	psi	35,600 (7,200)	63,500 (4,500)
Modulus	GPa	2.93 (0.14)	3.23 (0.57)
	ksi	425 (20)	468 (83)
Impact Properties: ASTM D256, ASTM D4812			
Notched	J/m	26.6 (3.5)	21.7 (4.7)
	ft*lb/in.	0.498 (0.065)	0.407 (0.089)
Unnotched	J/m	260 (57)	68.0 (29.8)
	ft*lb/in.	4.87 (1.1)	1.27 (0.56)

¹ Values in parentheses are standard deviations.



Outgassing

ULTEM™ 1010 resin, natural, was printed with a 0.254 mm (0.010 in.) layer height on a Stratasys Fortus 450mc and tested per ASTM E595-15. Full report available upon request.

Table 5 – ULTEM™ 1010 Resin Outgassing Test Results

Sample	TML (%)	CVCM (%)	WVR (%)
ULTEM™ 1010 Resin, Natural, T14 tip, Flat (XY)	0.55	0.02	0.39
ULTEM™ 1010 Resin, Natural, T14 tip, Upright (ZX)	0.58	0.03	0.33
Testing Observations ¹			
Visible Condensate	No	Opaque	N/A
Percent Covered	0%	Interference Fringes	N/A
Thin	N/A	Colored Fringes	N/A
Heavy	N/A	Sample appearance after test	No change
Transparent	N/A		

¹Observations apply to all tested samples

Fire Protection for Devices and Appliances UL 94

Samples of ULTEM™ 1010 resin were 3D printed on a Stratasys F900 printer at 0.254 mm (0.010 in.) layer height using a T14 tip with default settings and tested per UL 94 flammability standards. The results showed that ULTEM™ 1010 resin achieved an HB rating for samples printed at a thickness of 3 mm as per UL 94 - Section 7. Additionally, the material earned a V-0 rating for samples printed at a thickness of 1 mm in the XZ orientation and 1.5 mm in the ZX orientation as per UL 94 - Section 8.

Table 6 – ULTEM™ 1010 resin UL 94 Flammability Test Results

Material	Test	Thickness (mm)	Orientation	Classification
ULTEM™ 1010 resin	Horizontal	3	XZ	HB
			ZX	
	Vertical	1	XZ	V-0
		1.5	ZX	



Appendix

Figure 1 – 2nd heating scan DSC data for the ULTEM™ 1010 resin Flat (XY) sample.

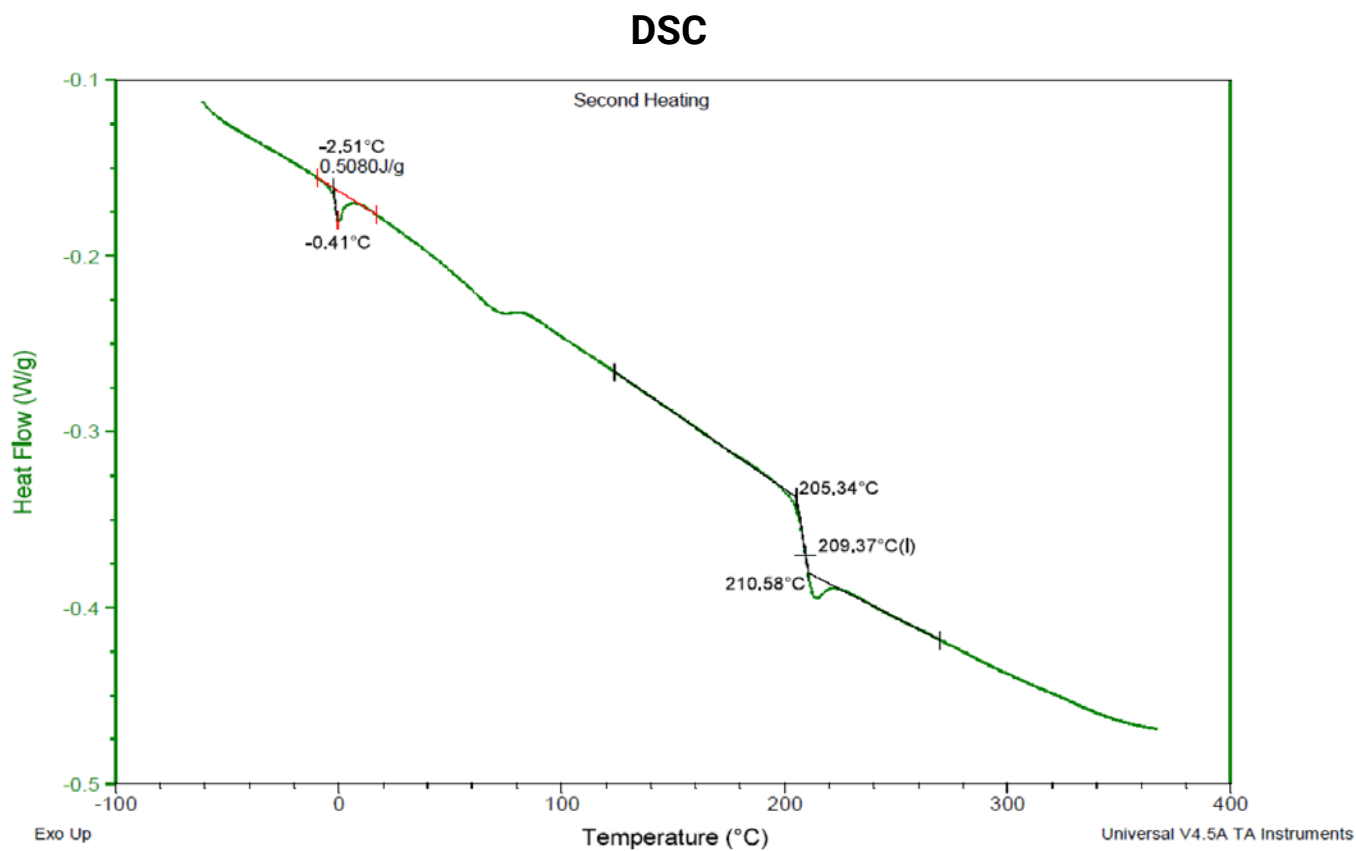




Figure 2 – Dimension change data as a function of temperature for the ULTEM™ 1010 resin Flat (XY) sample.

TMA

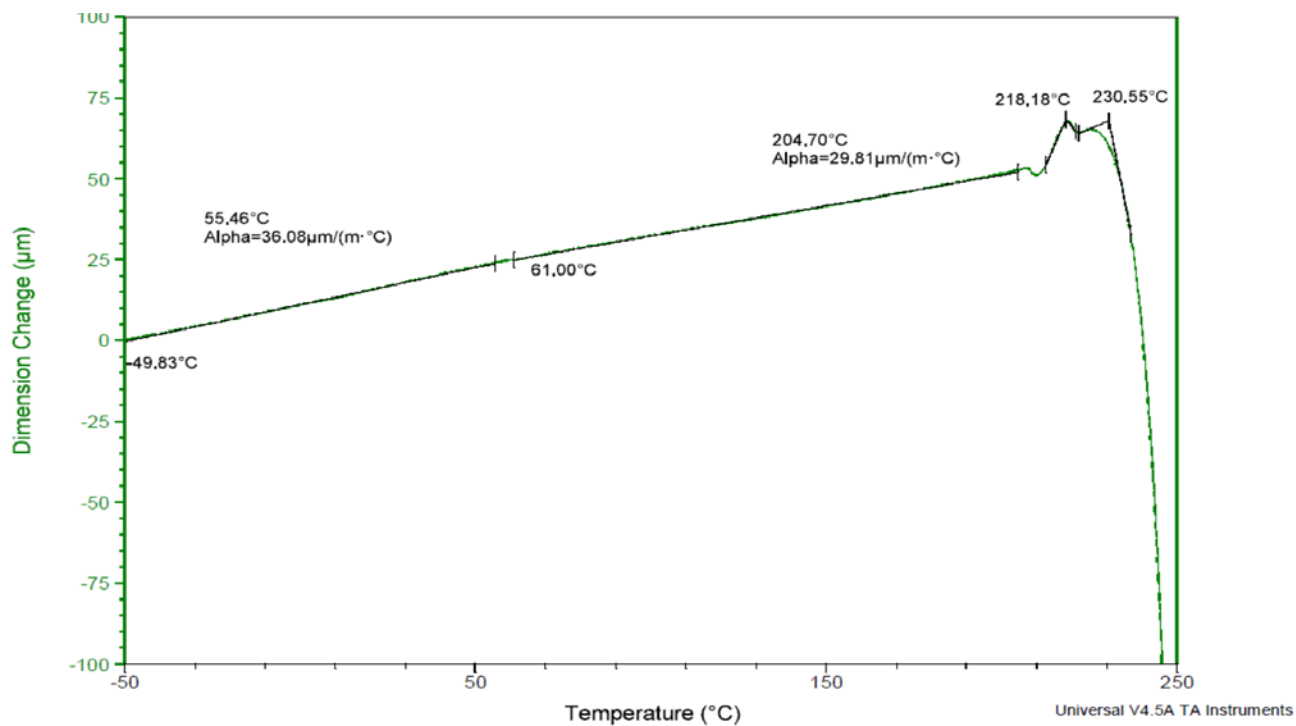


Figure 3 – Dimension change data as a function of temperature for the ULTEM™ 1010 resin On Edge (XZ) sample.

TMA


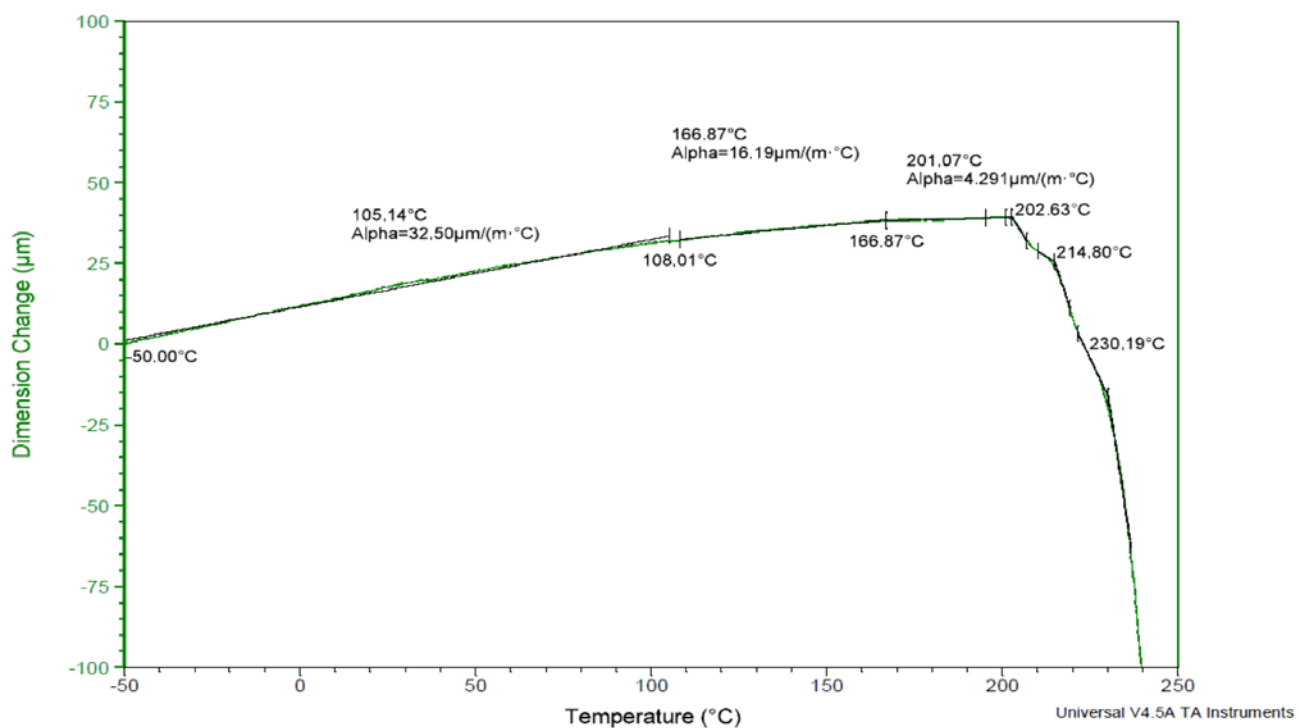




Figure 4 – Overlay of the dimension change data for the Flat (XY) and On Edge (XZ) ULTEM™ 1010 resin samples.

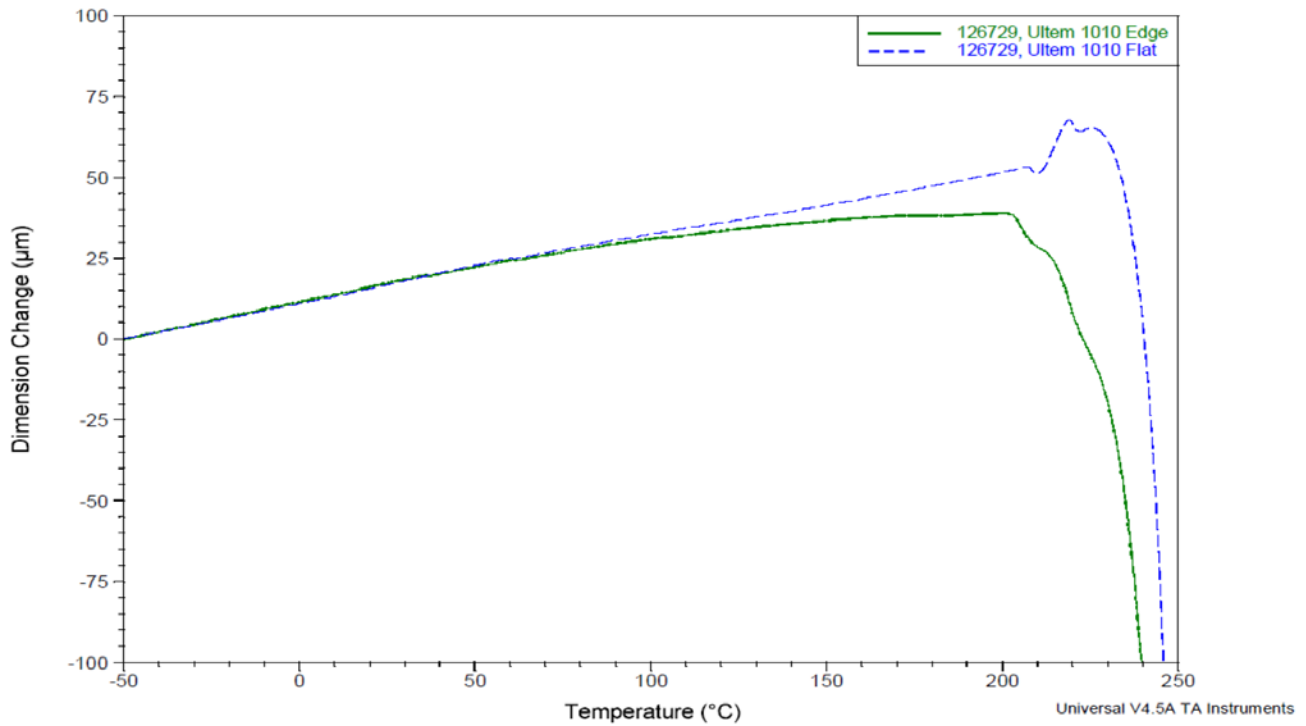

stratasys.com

ISO 9001:2015
Certified

Stratasys Headquarters
5995 Opus Parkway,
Minnetonka, MN 55343
+1 800 801 6491 (US Toll Free)
+1 952 937-3000 (Intl)
+1 952 937-0070 (Fax)

1 Holtzman St., Science Park,
PO Box 2496
Rehovot 76124, Israel
+972 74 745 4000
+972 74 745 5000 (Fax)

MATERIAL DATA SHEET

FDM

© 2025 Stratasys. All rights reserved. Stratasys, the Stratasys Signet logo, FDM, and Fortus are registered trademarks of Stratasys Inc. Fortus 450mc, Fortus 900mc and F900 are trademarks of Stratasys, Inc. ULTEM™, 9085, and 1010 are trademarks of SABIC, its affiliates or subsidiaries. All other trademarks are the property of their respective owners, and Stratasys assumes no responsibility with regard to the selection, performance, or use of these non-Stratasys products. Product specifications subject to change without notice.
MDS_FDM_ULTEM 1010 Resin_0625a